

AQWebViewer

See your wind data live in AQWebViewer

Just open your web browser and log in to see wind data and system status live.

- Wind data every ten minutes
- Secure data storage
- Automatic system monitoring
- Alarm messages via SMS or E-mail
- Get the system coordinates



Wind data every ten minutes

Every ten minutes a new set of wind data is sent from the system to a secure server where the raw data is stored. The data can be monitored live over a secure internet connection. The data can be retrieved and exported in a variety of formats suitable for analysis programs such as Windpro.

Secure data storage

The wind data is stored on secure servers.

Automatic system monitoring

A quick overview of the system status is available in realtime and the system parameters can be adjusted using the internet.

Alarm messages via SMS or E-mail

An alarm message will be sent via SMS or E-Mail if something needs to be adressed, like low fuel level.

Get the system coordinates

The built in GPS will provide the installation coordinates, the coordinates are also included in the datafiles. The system can also be programmed to send an alarm if the system is moved from the measurement position.

